


Optoma EX 615 Projector Settings

These are the reference settings and connections for normal SCC operation. Updated Jan 2013 with revised brightness & degamma settings – see associated post on web “Dicentra/Laptop/Optoma settings, updated Nov 2012”.

Connections

There are 4 leads and a remote control which we keep in a plastic bag to make it easier to pull them in and out of the tight-fitting Projector bag.

- ⤴ Mains lead
- ⤴ VGA lead
- ⤴ USB lead
- ⤴ Audio lead

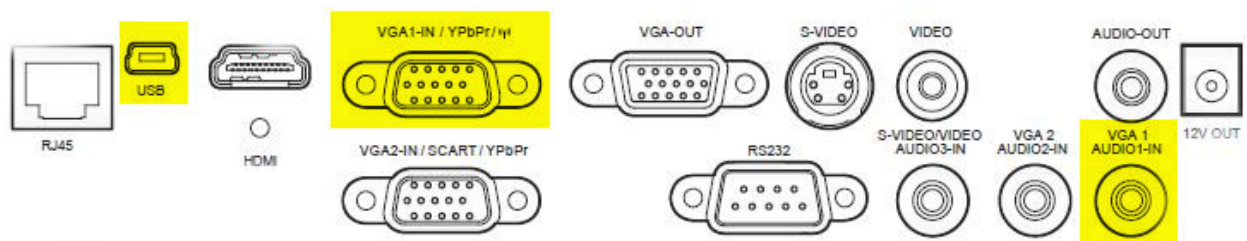

Connect from the PC's **External VGA output** to EX615 **VGA1 In**

- ⤴ You will need to switch the PC's External VGA output on, probably by toggling one of the Function Keys, perhaps using a Fn Shift key as well. On my Acer 3610 Laptop, use Fn + F5 keys to toggle between laptop only, **laptop & projector**, and projector only.

Optionally connect the **EX615 sub-min USB socket** to a standard size PC USB socket

- ⤴ This enables the Projector Remote Control to operate the PC's next/last slide function, simulating the laptop's Page Up/Down and Arrow Left/Right keys. It does not work on every software programme.

Optionally connect the Audio Lead from the PC sound output to the **Projector VGA1 Audio 1 In**

- ⤴ Remember there are volume controls on both the PC and the Projector. The Projector setting can be accessed via the menu system or the remote control volume button. There is also a mute button on the remote control.

To turn the projector off, press the Power Button twice. The first time brings up a box at the bottom right of the screen asking “Turn Off? Do not turn the projector back on immediately after turning off. You need to avoid turning the projector off inadvertently by pressing the Power button on the remote control!

Reference Settings

IMAGE TAB

Display Mode	User 2
Brightness, Contrast	48%, 50% (was 50%, 50%)
Sharpness	15
Advanced...	
Degamma	PC (was Film)
Brilliant Color	0
Color Temp	Warm
Color Settings	All 0
Color Space	Auto
Input Source	All ticked

Note: The User 2 settings use the initial default settings from Movie mode. Any further adjustments by the user in User2 will be saved in this mode for future use.

DISPLAY TAB

Format	Auto
Overscan/Zoom	0
Image Shift Horiz/Vert	0
Keystone	0

SETUP TAB

Language	English
Projection	Projector on table and Audience in front of screen
Menu location	Centre
Signal...	
Phase	27
Frequency	0
H	0
V	0
Security...	Off

Projector ID	0
Mute	Off
Volume	Any, e.g. 4
Audio Input	Default
Advanced...	
Logo	Optoma
Logo capture	Don't use
RS232	RS232
Network	We don't use this
Wireless	Off

OPTIONS TAB

Source Lock	Off
High Altitude	Off
Information Hide	Off
Keypad	Off
Background Color	Blue
Advanced...	
Direct Power On	Off
Auto Power Off	0
Sleep Timer	0
Power Mode (Standby)	Active
Lamp Settings...	
Lamp Hours	
Lamp Reminder	On
Brightness Mode	Standard
Lamp Reset	No